



**R1 41 01 00**  
PNEUMATICS-DIRECTIVE FOR SUPPLIERS, ERACTION COMPANIES,  
MANAGERS AND USERS

**Contents**

---

---

- Introduction
- Contents
- Parts 0 to 9, numbered separately as Technical Directive:

<b>Part</b>	<b>Number</b>	<b>Title</b>
0	R1 41 01 00	Contents
1	R1 41 01 01	Scope and application
2	R1 41 01 02	General
3	R1 41 01 03	Selection air supply connection and conditioning
4	R1 41 01 04	Selection energy distribution (valves)
5	R1 41 01 05	Selection cylinders and air motors
6	R1 41 01 06	Pressure measurement and accessories
7	R1 41 01 07	Selection piping
8	R1 41 01 08	Selection seals
9	R1 41 01 09	Appendix