

# SAFETY INSTRUCTIONS

## Loading and unloading of trucks




When parking, follow the instructions of the loading/unloading personnel.

Always engage the handbrake of your truck/trailer (see reverse side).



Never leave your truck unattended.

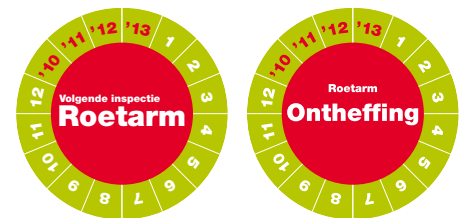

### Diesel engine emissions

In order to enter the hall, the truck engine must comply with the Euro 4 or Euro 5 standards or be fitted with a particulate filter. The truck must have a "low particulate emissions" or an "exempted" sticker on its windscreen.



### Obligatory protection equipment

The proper clothing and personal protection equipment (PPE) must be worn when entering the factory hall or workplace. The requirements are displayed at the entrance to each building.



### RED ZONES

- Do not enter the red zone during loading and unloading.
- Cranes and forklifts operate in the red zone during loading and unloading.



### YELLOW ZONES

- If you need to be present in the yellow zone, consult with loading/unloading personnel beforehand.
- Only enter the yellow zone when cranes or forklifts are not moving.
- Make eye contact with the crane or forklift operator.



### GREEN ZONES

- You should be in the green (safe) zone during loading and unloading.
- As a driver, being in the green zone gives you an overview of the situation and ensures that you are visible.

# SAFETY INSTRUCTIONS

## Parking of trucks



### ALWAYS ENGAGE THE HANDBRAKE OR PARKING BRAKE

- ALWAYS engage the handbrake of your truck/trailer.
- Turn off the engine if it is not needed for loading/unloading.
- Never leave your truck unattended; remove the key from the ignition.
- Always engage the handbrake on uncoupled trailers.



### NO PARKING BRAKE?

Place proper chocks under the wheels of the fixed axle.



When parking, follow the instructions of the loading/unloading personnel.

Wear the proper and obligatory personal protection equipment (see reverse side).

